




Adjusting the bubble flow



Adjusting the dials

1. For larger bubbles – Turn dial clockwise
2. For smaller bubbles – Turn dial counter-clockwise
3. When observing the bubbles
 - A. If you find that the bubbles are bigger through one of the outlets, twist the corresponding dial counter-clockwise until at desired level.

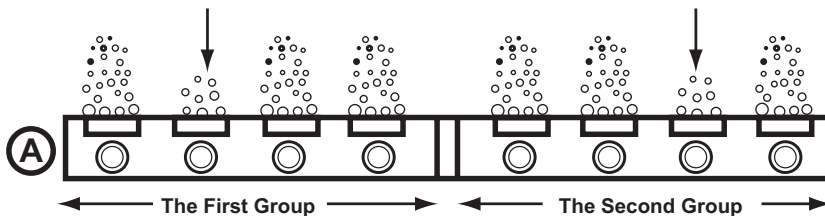

- B. Now start turning the rest of the dials until all the bubbles are even.

