






Replacing Awning Fabric Cover Instructions: (Manual Awnings)

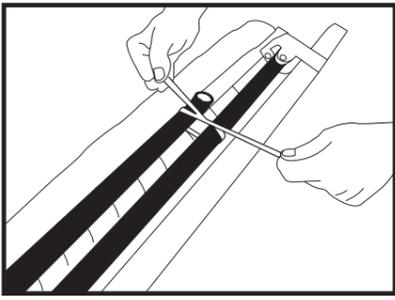


1. Tie awning arms together so they won't get in the way when replacing the fabric.

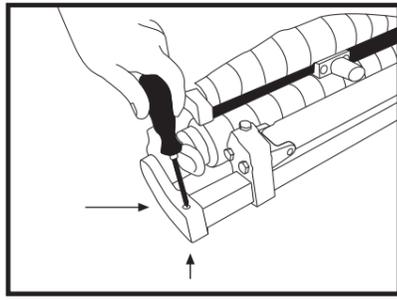


2. Remove two screws located at the front and back of awning bar. NOTE: usually hidden under a sticker.

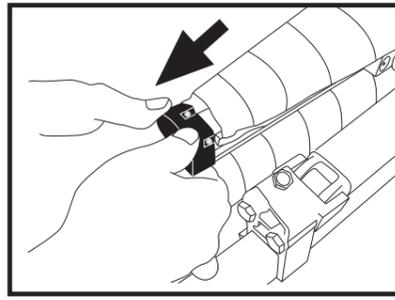


3. Remove the end cap located by the end of the valance. You will see two more screws, remove along with the plug/bung.

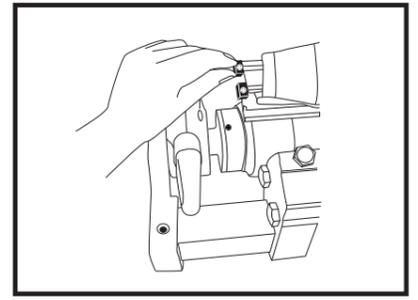


4. Slide the screws out (2). Keep them in a safe place, you will need these later on.

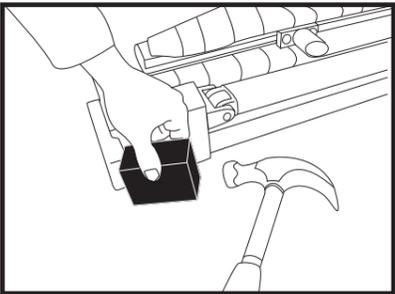


5. Use a wooden block and hammer the side awning bar. This will loosen the end bar, you should be able to pull the bar off with ease.

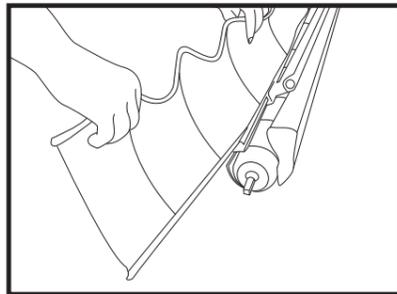


6. Slide the valance out of the valance bar.

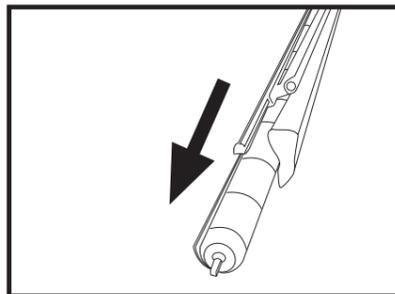


7. Slide the fabric roller out of the frame.

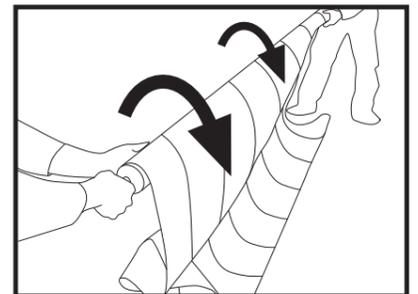


8. NOTE: Ideally two people to perform this task. Unroll the fabric.

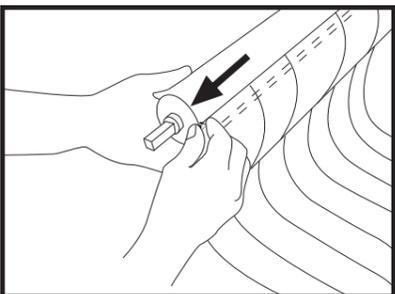


9. One more screw to remove, located by the end of the fabric/roller. This keeps the fabric in place.

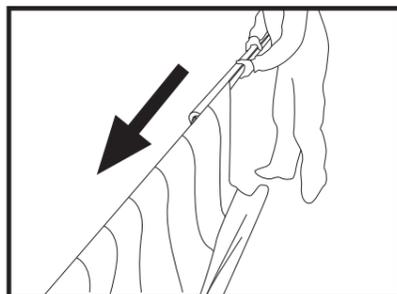


10. Slide the fabric out, one person holding the roller while the other slides the fabric.

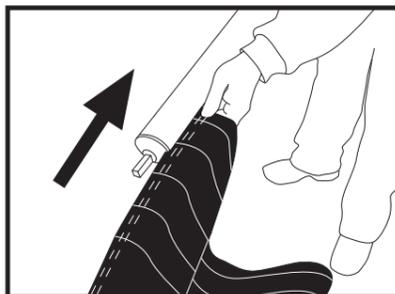


11. Replacing awning fabric cover. Slide the fabric back into the roller along the groove.

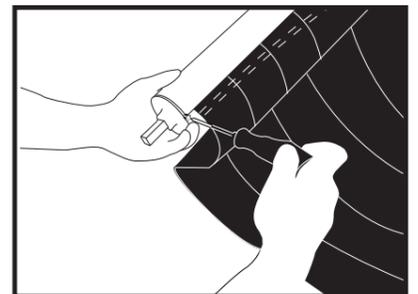


12. Tighten up the screw plug/bung.

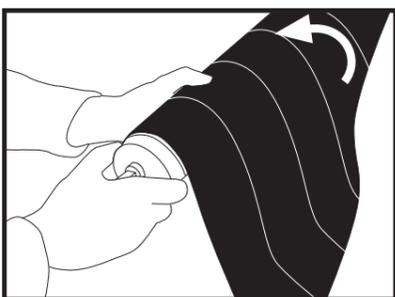


13. Carefully roll the fabric back up, making sure the fabric is aligned.

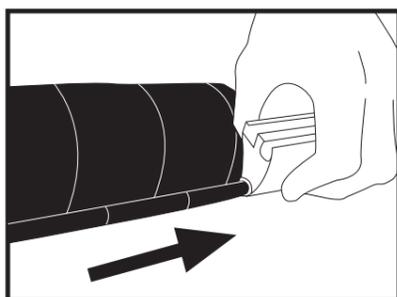


14. Once fully rolled up, slide the end of roller back into the valance bar. NOTE: Make sure the end fabric (circular part) slides into the metal (valance section)

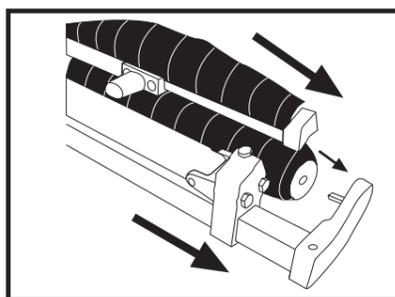


15. Slide the roller/fabric back into the frame. NOTE: Check to make sure the awning arms are still tied up so it won't get in the way.

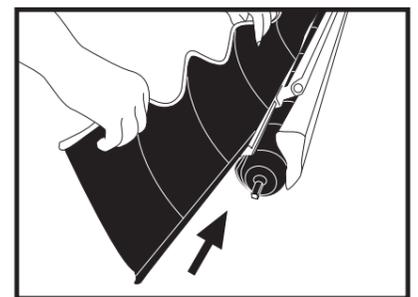


16. Slide the valance, filling bit back onto the valance bar.

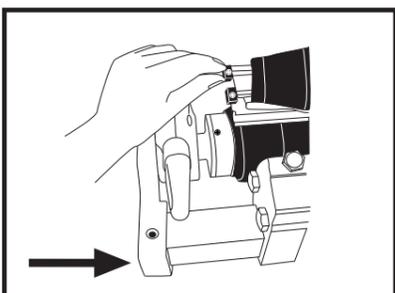

17. Place the screws with the plug/bung back in (2). Tighten up so the valance will stay in position.

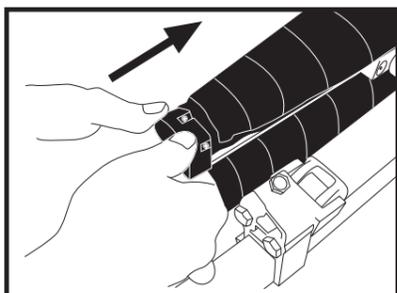

18. Place the end cap back on.

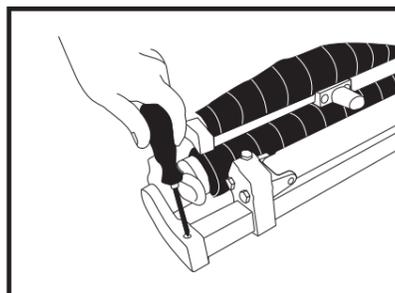

19. Finally, install the side awning bar back on, tighten up two screws front and back of the bar.